Publication No. 3H9029
12FEB99

INSTALLATION INSTRUCTIONS
for the
200 BOARD/SWITCH ASSEMBLY
on the
Kodak M35-M/M35A-M *X-Omat* PROCESSOR
Service Codes: 3408 and 3133

Kodak M35 *X-Omat* PROCESSOR
Service Code: 3296

HEALTH IMAGING

© Eastman Kodak Company

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

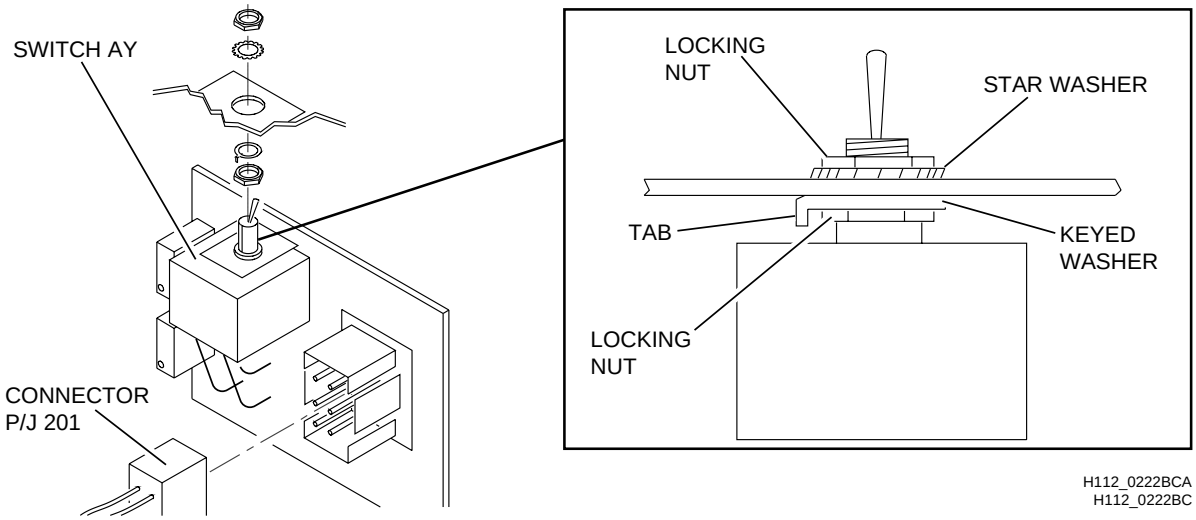

[1] Remove:

- CONNECTOR P/J 201 from the PROCESSOR
- LOCKING NUT
- STAR WASHER
- KEYED WASHER
- LOCKING NUT
- existing 200 BOARD/SWITCH AY

Important

When the 200 BOARD/SWITCH AY is installed, the KEYED WASHER will not align with the KEY HOLE. The TAB on the KEYED WASHER must be located with the TAB down and not against the WALL of the ELECTRICAL BOX to seat correctly.

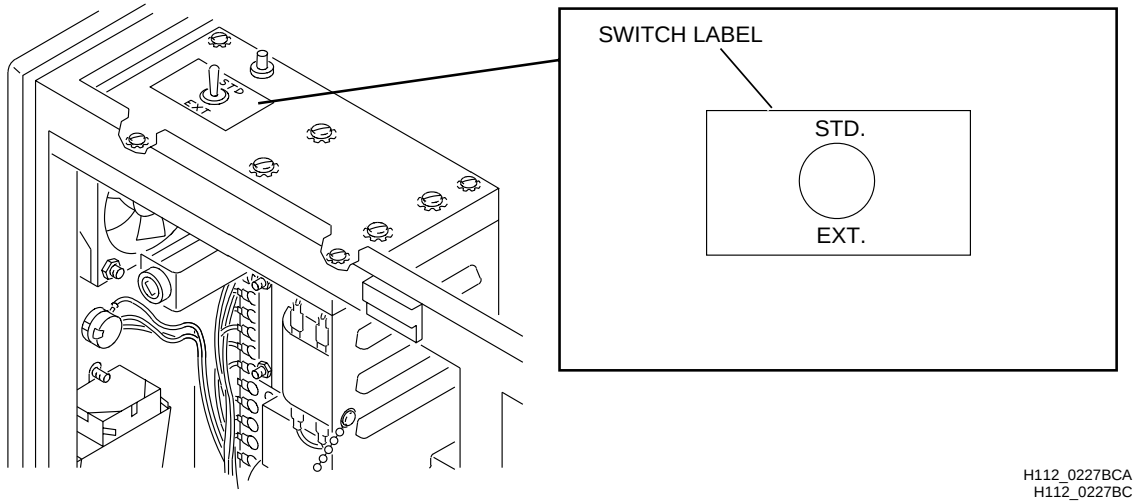

H112_0227BCA
H112_0227BC

[2] Install:

- new 200 BOARD/SWITCH AY
- LOCKING NUT
- KEYED WASHER
- STAR WASHER
- LOCKING NUT
- new SWITCH LABEL

[3] Tighten the LOCKING NUT on the new 200 BOARD/SWITCH AY.

[4] Check that the SWITCH AY will not rotate.

[5] Install CONNECTOR P/J 201.

[6] Discard the old 200 BOARD/SWITCH AY.

Publication History

Publication Date	ECO No.	Pub. No.	Affected Pages	File Name	Notes
12FEB99	2590-355	3H9029	All	ii3408_2_12feb99.fm	First printing

Kodak and *X-Omat* are trademarks.

ii3408_2_12feb99.fm

Health Imaging

EASTMAN KODAK COMPANY ● ROCHESTER, N.Y. 14650